 


WARING PRO™

PROFESSIONAL EXTRA BURNERS

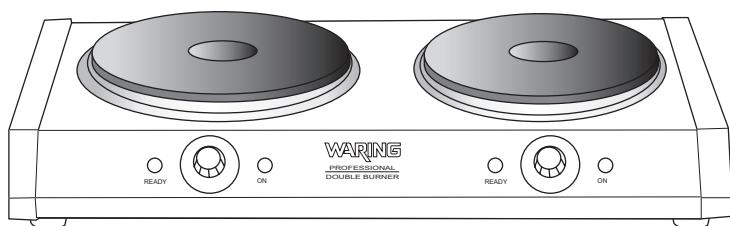

DB60



SB30

For your safety and continued enjoyment of this product,
always read the instruction book carefully before using.

IMPORTANT SAFEGUARDS

When using electrical appliances basic safety precautions should always be followed, including the following:

 
- 1. READ ALL INSTRUCTIONS.**
2. Do not touch hot surfaces. Use handles or knobs.
3. Move or lift the burners by their sides after they have cooled completely.
4. To protect against electrical shock do not immerse cord, plugs or housing unit in water or other liquids.
5. This appliance should not be used by or near children or individuals with certain disabilities.
6. Do not leave appliance unattended when it is on.
7. Unplug from the wall outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
8. Do not operate any appliance with a damaged cord or plug, after the appliance malfunctions or has been damaged in any manner. Call the nearest authorized Waring customer service center (see warranty) to return for examination, repair or adjustment.
9. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
10. Do not use outdoors or while standing in a damp area.
11. Do not let cord hang over the edge of the table or counter, or touch hot surfaces.
12. Do not place on or near a hot gas or electric burner, or in a heated oven.
13. Extreme caution must be used when moving any pot or pan containing hot oil or other hot liquids from this appliance.
14. When using this appliance provide at least 4-6 inches of air space above and on all sides for air circulation.
15. Do not use this appliance for anything other than its intended use. This appliance is for household use only.
16. To disconnect, turn temperature control dial(s) to off, then remove plug from wall outlet.
17. Close supervision is necessary when any appliance is used by or near children.

SAVE THESE INSTRUCTIONS

FOR HOUSEHOLD AND COMMERCIAL USE

GROUNDING INSTRUCTIONS

For your protection, Waring Pro™ Extra Burners are equipped with a 3-conductor cordset that has a molded 3-prong grounding-type plug, and should be used in combination with a properly connected grounding-type outlet as shown in Figure 1.

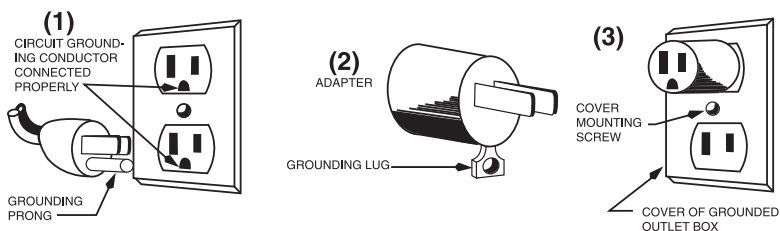

If a grounding-type outlet is not available, an adapter, shown in Figure 2, may be obtained so that a 2-slot wall outlet can be used with a 3-prong plug. Referring to Figure 3, the adapter must be grounded by attaching its grounding lug under the screw of the outlet cover plate.

CAUTION: Before using an adapter, it must be determined that the outlet cover plate screw is properly grounded. If in doubt, consult a licensed electrician. Never use an adapter unless you are sure it is properly grounded.

 
Note: Use of an adapter is not permitted in Canada.

SHORT CORD INSTRUCTIONS


A short power-supply cord is provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord.

If a longer detachable power-supply cord or extension cord is used, (1) the marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance, and (2) the longer cord should be arranged so that it will not drape over the counter top or table top where it can be pulled on by children or tripped over unintentionally.

PARTS LIST

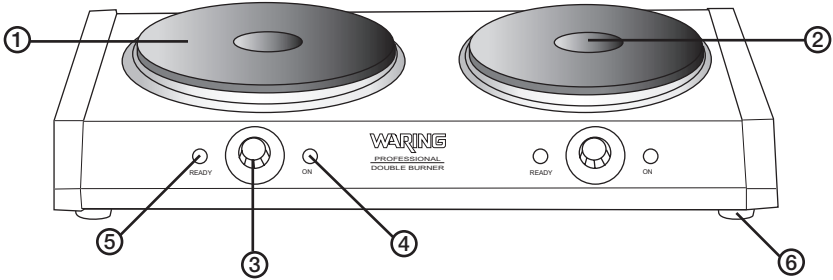

DB60

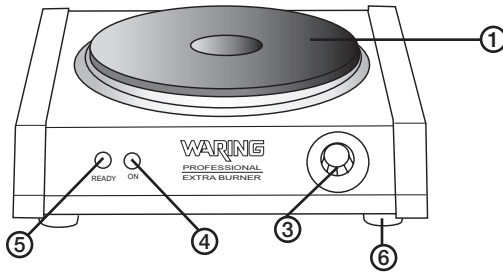 

SB30

1. Large cast iron burner and burner ring
2. Small cast iron burner and burner ring
3. Adjustable temperature control
4. Power On indicator light
5. Ready indicator light
6. Non-skid feet

OPERATION

Before plugging in your extra burner, check to ensure that the electrical circuit is not overloaded with other appliances. This unit should always be operated on a separate 120 volt 60 Hz AC circuit. Be certain that your extra burner is resting level on the counter top. There is one burner ring on the SB30 and two burner rings on the DB60. The large burner plates are rated at 1300 watts. The smaller burner is rated at 500 watts. Use the larger burner for fast cooking, such as boiling water, and use the smaller burner for simmering or warming. Note: Avoid using pans that are unstable and easily tipped.

1. Place unit on a flat surface.

Note: Be sure to place unit in a safe area and leave 4 to 6 inches of space above and around the unit for proper ventilation.

2. Plug unit into electrical outlet. Turn temperature control dial(s) from Off to desired setting. Caution: Do not touch burner while in use.
3. You can choose a temperature setting from 1-5.
Setting 1 — Low
Setting 2 — Low/Medium
Setting 3 — Medium
Setting 4 — Medium/High
Setting 5 — High

Note: When extra burner reaches desired temperature, the green “ready” indicator light will illuminate. Your burner is now ready for use.

4. When using a pot or pan, place it in the center of the burner. It is recommended that you use a pot or pan that is the same size as the burner.
5. When cooking is complete turn temperature control dial(s) to the Off position.
6. When not in use, unplug unit to assure that it is off. This helps prevent accidental burns.

IMPORTANT NOTICES:

- Before the extra burner is used for the first time, it should be heated up at maximum setting for approximately 4 minutes without a pot. This will burn off any residues on the burner plates.
- The extra burner may smoke the first time it is used - it is not defective and the smoke will burn off within a few minutes.
- Do not leave the unit ON without any pots/pans on the solid burners after the initial burn-off process.
- Do not use as a portable heater.
- Make sure the power supply cord does not touch hot elements or cooking utensils.
- For daily cooking, wipe excess water/condensation off pots, lids and utensils prior to use.
- Make sure that hot pots or pans do not touch the housing; this could damage the housing's finish.
- The larger burners are rated at 1300 watts. The smaller burner is rated at 500 watts. Use the larger burner for fast cooking, and use the smaller burner for simmering or warming.

CARE AND CLEANING

Reasonable care will ensure many years of service from your unit. Avoid dropping items on the burner rings and solid burners.

1. Turn temperature control dial(s) to the "Off" position.
2. Always unplug unit from electrical outlet and allow to cool before cleaning.
3. Never immerse unit in water or other liquids.
4. For easy cleaning, the burners are sealed. Do not attempt to separate burners from the unit.
5. Use a damp, soft cloth or sponge to clean the surface of the solid burners, burner rings, non-skid feet and housing unit. Never use harsh abrasive or steel wool pads on any part of the burner as they may scratch the surface or damage the unit.
6. Thoroughly dry burners and burner rings.
7. There are no user serviceable parts. Any servicing other than cleaning should be performed by an authorized service center.

IMPORTANT:

Any servicing requiring disassembly other than the above cleaning must be performed by an authorized service center.

Any trademarks or service marks of third parties used herein are the trademarks or service marks of their respective owners.

© 2006 Waring Consumer Products,
Division of Conair Corporation
150 Milford Road
East Windsor, NJ 08520
www.waringproducts.com
Printed in China
SB30/DB60 IB
06WR32088

IB-7004